


# ILLUMINATOR SPORT

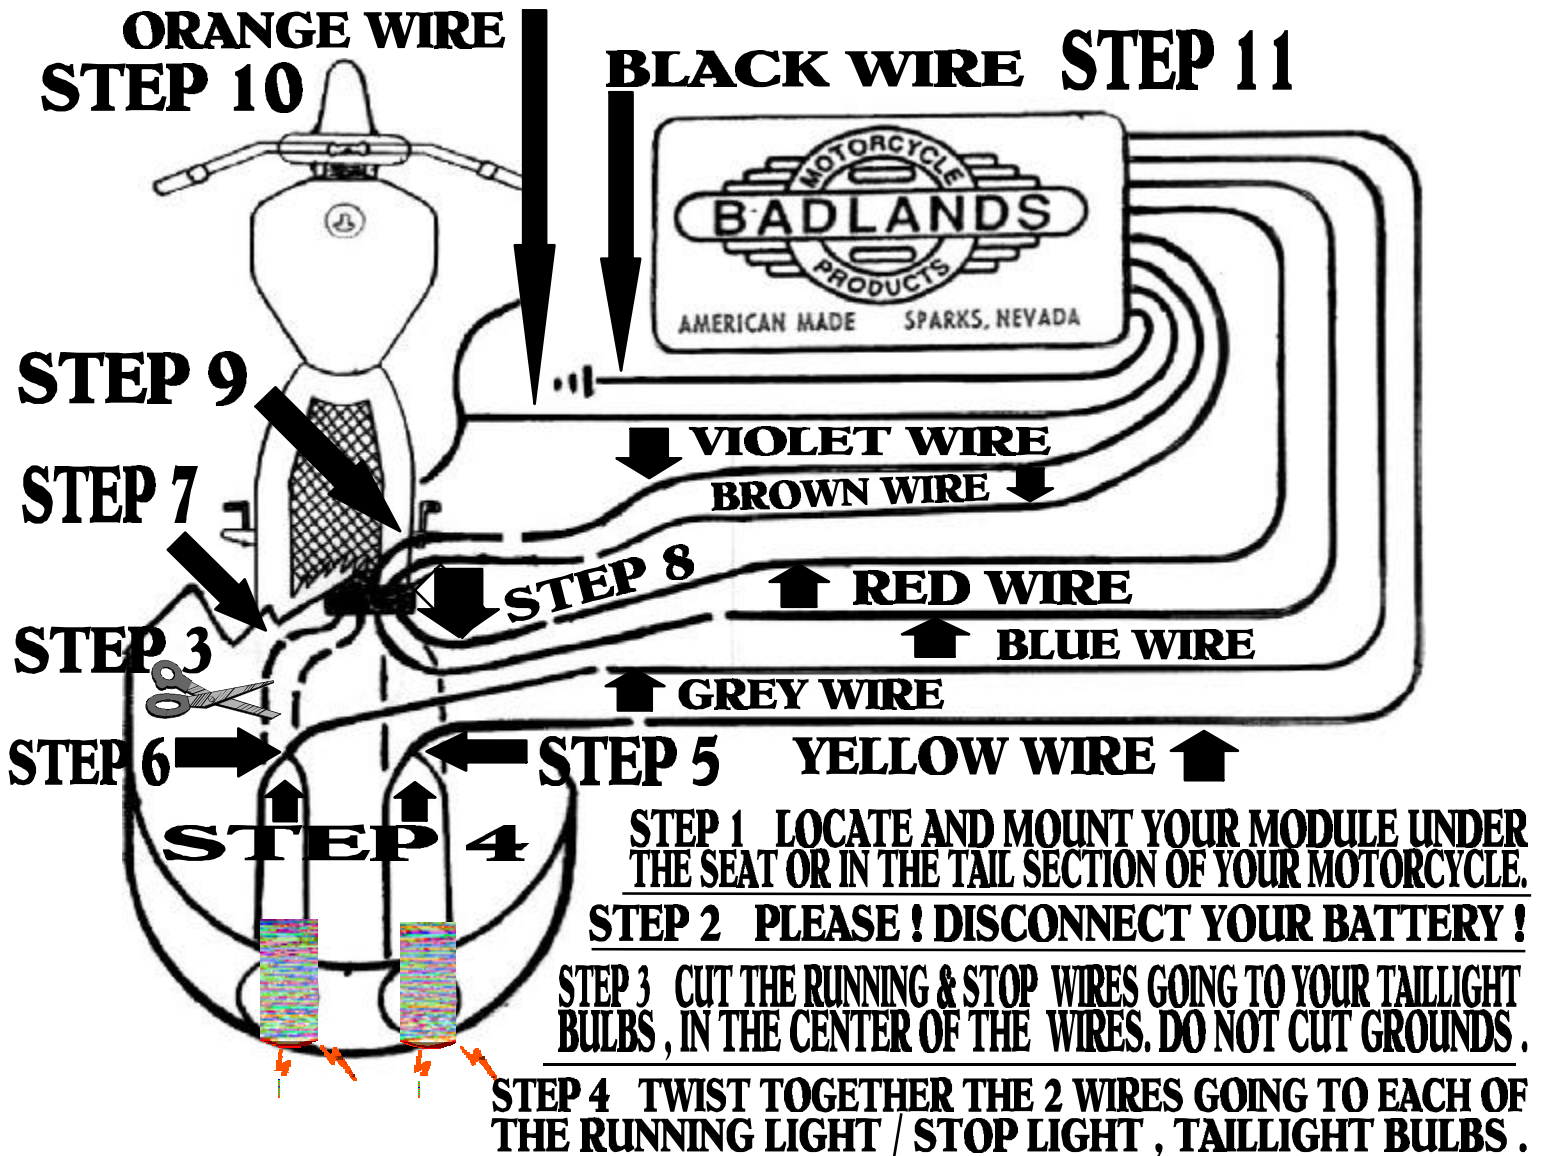

**STEP 5** CONNECT THE YELLOW WIRE FROM THE MODULE , TO THE RIGHT SIDE REAR LAMP WIRES .

**STEP 6** CONNECT THE GREY WIRE FROM THE MODULE , TO THE LEFT SIDE REAR LAMP WIRES.

**STEP 7** THE TWO WIRES ON THE LEFT SIDE THAT YOU CUT, WILL GET HEAT SHRINK , SEPERATELY THEN TOGETHER . WIRE TIE TOGETHER AND NEATLY HIDE THEM .

**STEP 8** BUTT CONNECT THE RIGHT SIDE STOP LIGHT WIRE , TO THE RED WIRE FROM THE MODULE . BUTT CONNECT THE RIGHT SIDE RUNNING LIGHT WIRE , TO THE BLUE WIRE FROM THE MODULE . USE A TEST LIGHT TO DETERMINE WHICH WIRE IS YOUR RUNNING AND STOP LIGHT.

**STEP 9** DELETE YOUR TURN SIGNALS . BUTT CONNECT THE LEFT REAR TURN SIGNAL WIRE TO THE VIOLET WIRE FROM THE MODULE . BUTT CONNECT THE RIGHT REAR TURN SIGNAL WIRE TO THE BROWN WIRE FROM THE MODULE.

**STEP 10** SCOTCH LOCK THE ORANGE WIRE FROM THE MODULE TO THE RUNNING LIGHT WIRE . MAKE THE CONNECTION FOWARD OF THE BUTT CONNECTER CONNECTION ON STEP 8 .

**STEP 11** BLACK WIRE FROM MODULE GOES TO GROUND . THE BATTERY POST IS THE BEST . RECONNECT THE BATTERY GROUND AND YOU'RE READY FOR ACTION !

[WWW.BADLANDSMOTORCYCLEPRODUCTS.COM](http://WWW.BADLANDSMOTORCYCLEPRODUCTS.COM)